

PACKING LIST

Please take and put the product carefully when received the goods. Then check if the product has any damage by the transportation, and check the below accessories:

Moving head light 1pc

User manual 1pc

Power cable 1pc

Bow handle 1pc

 
TECHNICAL PARAMETER

Power supply	AC100-250V,50-60HZ
Rated power	180W
Channel	12/18 Channel
Control mode	DMX512,Auto,Sound control,Master-slave,RDM
Color wheel	One color wheel, 8 colors + white
Gobo wheel	One gobo wheel, 8 gobo+white
Pan/Tilt	Pan:540° Tilt:180°
IP Rating	IP20
Prism	18 Prism

BUTTONGRAPHIC



MENU



UP



DOWN



ENTER

MENU : Function keys

UP : Plus keys

DOWN : Minus keys

ENTER : Confirm keys

Menu Function

Addr	001-512	512 Address setting
CHnd	12CH	12 Channel
	18CH	18 Channel
Slnd	Sl01	Slave mode
	Auto	Auto run mode
	Soun	Sound active mode
SHnd	SH0	Demo mode0
	SH1	Demo mode1
	SH2	Demo mode2
	SH3	Demo mode3
Sens	10-100	Sound control sensitivity
LEd	OFF	Screen off after 5 seconds
	ON	Screen always on
diSP	OFF	Display forward
	ON	Display reverse
rPRn	OFF	X motor forward rotation
	ON	X motor reverse rotation
rTiL	OFF	Y motor forward rotation
	ON	Y motor reverse rotation
rest	YES	Reset
Cxxx		Detect temperature

12 Channel Mode

Channel			Function
CH1	Pan	0-255	Pan 0-540°
CH2	Tilt	0-255	Tilt 0-180°
CH3	Light on&off		
CH4	LEDs Dimmer	0-255	From dark to light
CH5	Strobe	0-255	From slow to fast
CH6	Color wheel	0-255	Color wheel adjust
CH7	Gobo wheel	0-255	Gobo adjust
CH8	18 prisms	0-127	Off
	18 prisms	128-136	On
	18 prisms auto rotation	137-255	From slow to fast
CH9	LED Ring Auto	0-255	
CH10	LED Ring Auto mode speed	0-255	
CH11	No effect	0-255	
CH12	No effect	0-29	
	Auto mode	30-149	
	Sound control mode	150-250	
	Reset	251-255	Reset after 5 seconds

18 Channel Mode

Channel			Function
CH1	Pan	0-255	Pan 0-540°
CH2	Pan fine	0-255	
CH3	Tilt	0-255	Tilt 0-180°
CH4	Tilt fine	0-255	
CH5	Pan/Tilt speed	0-255	
CH6	Light on&off	0-255	
CH7	LEDs+LED Ring dimmer	0-255	From dark to light
CH8	Strobe	0-255	From slow to fast
CH9	Color wheel	0-255	Color wheel adjust
CH10	Gobo wheel	0-255	Gobo adjust
CH11	18 prisms	0-127	Off
	18 prisms	128-136	On
	18 prisms auto rotation	137-255	From slow to fast
CH12	LED Ring R dimmer	0-255	
CH13	LED Ring G dimmer	0-255	
CH14	LED Ring B dimmer	0-255	
CH15	LED Ring Auto	0-255	
CH16	LED Ring Auto mode speed	0-255	
CH17	No effec	0-255	
CH18	No effec	0-29	
	Auto mode	30-149	
	Sound control mode	150-250	
	Reset	251-255	Reset after 5 seconds