

# Big Topper®

**USER MANUAL**  
Model: BAR4010RGBW

PL.




Please read this manual carefully before using the product

- o Please read the following notes carefully because they include important safety information about the installation, usage and maintenance of this product;
- o Always make sure that the voltage of the outlet to which you are connecting this product is within the range stated on the decal or rear panel of the fixture;
- o This product is for indoor use only! To prevent risk of fire or shock, do not expose this fixture to rain or moisture;
- o Make sure there are no flammable materials close to the unit while operating;
- o Always install this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces;
- o Be sure that no ventilation slots on the unit's housing are blocked;
- o Always disconnect this product from the power source before cleaning it or replacing fuse;
- o Make sure to replace the fuse with another of the same type and rating;
- o If mounting this product overhead, always secure it to a fastening device using a safety cable.
- o The maximum ambient temperature (Ta) is 104°F (40°C);
- o In the event of a serious operating problem, stop using the unit immediately;
- o Make sure the power cord is not crimped or damaged;
- o Never disconnect the power cord by pulling or tugging on the cord;
- o Always avoid direct eye exposure to the light source when this fixture is on.

## Technical Specification

Light Source	40*2W RGBW 4in1 LED
Rated Power	90W
Lifespan	50,000 Hours
Voltage	AC100~240V 50/60HZ
Dimming	0~100% Linear Dimming
Feature	10 Sections Control
Strobe Frequency	1~30HZ
Control Mode	Auto/Sound/DMX/Master-slave/RDM
DMX Channel	4/9/45CH
Power Plug	PowerCon
Packing	4 Pcs/Ctn

## Menu And Setting

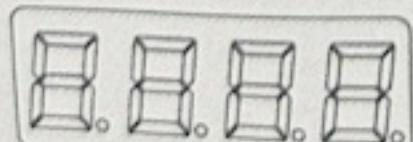

MENU  
 UP  
 DOWN  
 ENTER

Button	Function
<MENU>	Select the function mode, or return to the previous menu
<UP>	Use it to scroll up the list of options or to find a higher value
<DOWN>	Use it to scroll down the list of options or to find a lower value
<ENTER>	Use it to activate a menu option or a selected value

# USER MANUAL

Model: BAR4010RGBW

Menu	Value	Function
d001	001-512	DMX512 address code setting
CH09	04/09/45	DMX channel selection
n000	000-080	80 kind of RGBW auto play effects
S100	000-255	RGBW auto speed from slow to fast
C000	000-255	Switch the built-in effects / colors
Su99	01-99	Sound sensitivity adjustment
r255	000-255	Red dimming from dark to bright
g255	000-255	Green dimming from dark to bright
b255	000-255	Blue dimming from dark to bright
u255	000-255	White dimming from dark to bright
t000	000-255	RGBW strobe speed from slow to fast

## DMX CHANNEL

Set the address codes of all lighting fixtures and connect them in parallel with the DMX512 console using a three core signal wire. The address code stops flashing, indicating that the DMX512 console signal has been sent to the lighting fixture. According to the channel instructions, use the DMX512 console to control the relevant functions.

4 CH	Value	Function
CH1	000-255	Red dimming from dark to bright
CH2	000-255	Green dimming from dark to bright
CH3	000-255	Blue dimming from dark to bright
CH4	000-255	White dimming from dark to bright

9 CH	Value	Function
CH1	000-255	RGBW dimming from dark to bright
CH2	000-255	RGBW strobe from slow to fast
CH3	000-255	Red dimming from dark to bright
CH4	000-255	Green dimming from dark to bright
CH5	000-255	Blue dimming from dark to bright
CH6	000-255	White dimming from dark to bright
CH7	000-255	Switch the built-in effects / colors
CH8	000-255	80 kind of RGBW auto play effects
CH9	000-255	RGBW auto speed from slow to fast

<b>45 CH</b>	<b>Value</b>	<b>Function</b>
CH1	000-255	RGBW dimming from dark to bright
CH2	000-255	RGBW strobe from slow to fast
CH3	000-255	1st section red dimming from dark to bright
CH4	000-255	1st section green dimming from dark to bright
CH5	000-255	1st section blue dimming from dark to bright
CH6	000-255	1st section white dimming from dark to bright
.....	.....	.....
CH39	000-255	10th section red dimming from dark to bright
CH40	000-255	10th section green dimming from dark to bright
CH41	000-255	10th section blue dimming from dark to bright
CH42	000-255	10th section white dimming from dark to bright
CH43	000-255	Switch the built-in effects / colors
CH44	000-255	80 kind of RGBW auto play effects
CH45	000-255	RGBW auto speed from slow to fast