

		increase or decrease.
2	CH06 CH10	6/10 channel selection (06—10). Modify by pressing keys up and down to increase or decrease.
3	r.000	Red color selection (000—255). Adjust the brightness by pressing keys up and down.
4	g.000	Green color selection (000—255). Adjust the brightness by pressing keys up and down.
5	b.000	Blue color selection (000—255). Adjust the brightness by pressing keys up and down.
6	U.000	White color selection (000—255). Adjust the brightness by pressing keys up and down.
7	FH.00	Strobe (1—99). Adjust the speed by pressing keys up and down.
8	CL.01	Manual color selection (1—14). Adjust the color by pressing keys up and down.
9	CC.71	Jump (1—99). Adjust the speed by pressing keys up and down.
10	dE.72	Fade (1—99). Adjust the speed by pressing keys up and down.
11	CP.73	Pulse (1—99). Adjust the speed by pressing keys up and down.
12	SOU.9	Sound control (1—9). 9: Colorful sound control change; 1—8: Sound control strobe.

6 Channel Mode Menu

No.	Function	Description
1	R Dimming	Red dimming, from dark to bright
2	G Dimming	Green dimming, from dark to bright
3	B Dimming	Blue dimming, from dark to bright
4	W Dimming	Warm white dimming, from dark to bright
5	Led Stripe Circle Control Function Selection	0—3: Off 4—10: Single color 1 11—20: Single color 2 21—30: Single color 3 31—40: Single color 4 41—50: Single color 5 51—60: Single color 6 61—80: Function 1 81—100: Function 2 101—150: Function 3 151—200: Function 4 201—255: Function 5
6	Led Stripe Circle Control Function Speed	Speed, from slow to fast

10 Channel Mode Menu

No.	Function	Description
1	General Dimming	General dimming, from dark to bright
2	R Dimming	Red dimming, from dark to bright
3	G Dimming	Green dimming, from dark to bright
4	B Dimming	Blue dimming, from dark to bright
5	W Dimming	Warm white dimming, from dark to bright
6	Strobe	Strobe speed, from slow to fast
7	Function Selection	0—50: Dimming; 51—100: Color selection; 101—150: Jump; 151—200: Fade; 201—250: Pulse; 251—255: Sound control
8	Function Speed	The speed of functions in Channel 7 (51—250) is from slow to fast; sound control mode selection in Channel 7 (251—255)
9	Led stripe Circle Control Function Selection	0—3: Off 4—10: Single color 1 11—20: Single color 2 21—30: Single color 3 31—40: Single color 4 41—50: Single color 5 51—60: Single color 6 61—80: Function 1 81—100: Function 2 101—150: Function 3 151—200: Function 4 201—255: Function 5
10	Led stripe Circle Control Function Speed	Speed, from slow to fast