


Big Topper[®]

500W Haze Machine

User Manual

Model: HZ-500S

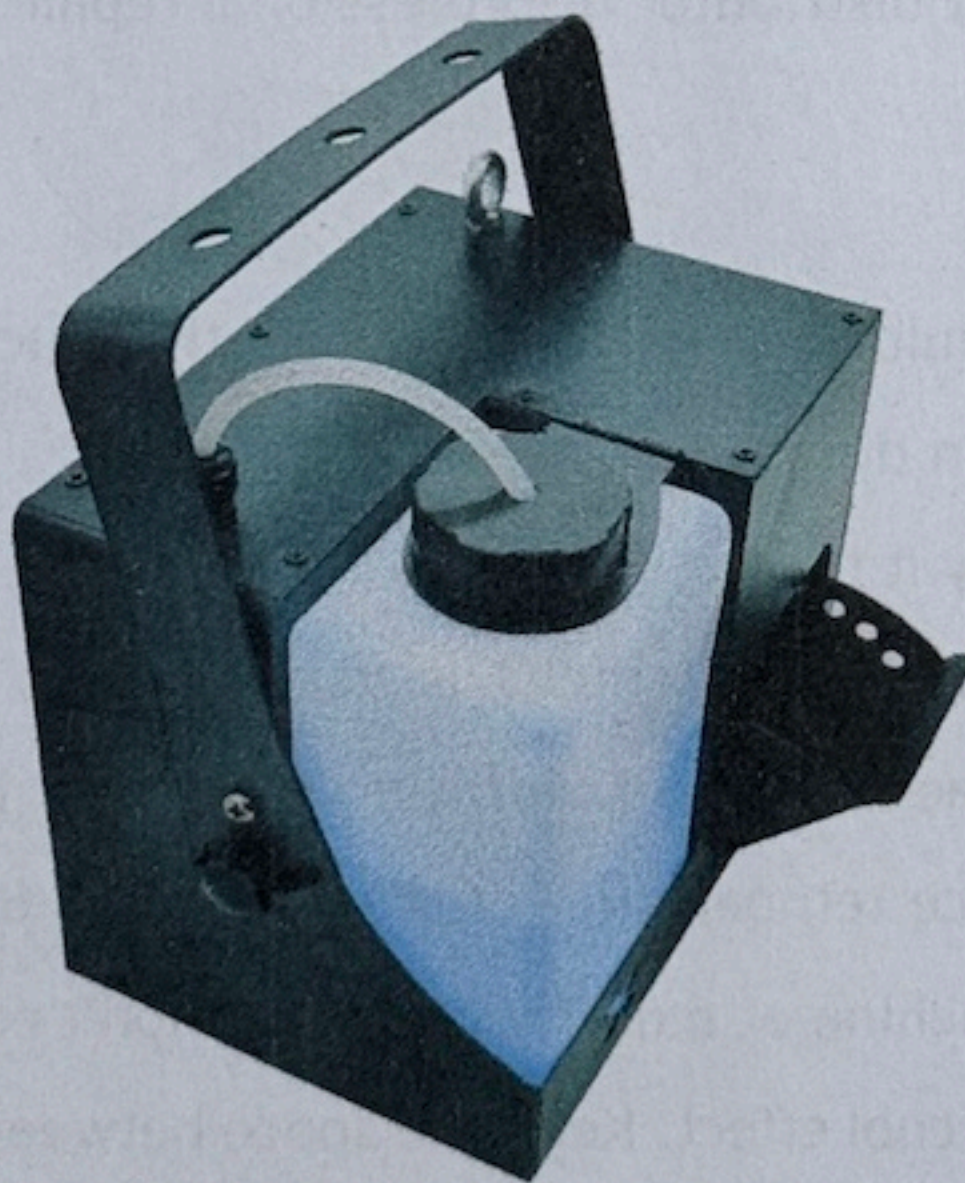

Please read this manual carefully before operation

Attention:

Please obey all notices about operation to avoid electric shock and keep the excellent effect.

1. Keep clean.
2. Use in door.
3. The power must same as located.
4. Power off before adding haze liquid.
5. Put in the horizontal direction and don't incline and place upside down.
6. Power off or pull out plug after use.
7. Non waterproof, if there are some humidity, water or liquid in it, please switch off power and contact distributor as soon as possible.
8. There are no spare parts with machine. If you need to repair it, please contact distributor or professional repair works.

Avoid fire:

1. Only for adults operate. Equip it over the touch of children and pay more attention during operation.
2. Don't spray it to people directly.
3. The temperature of smoke is very high so that keep the space between machine and other material things more than 100cm.(surface temperature of machine is 40-80°C, don't touch)
4. Put the machine at a drafty place and don't cover the cool holes to keep the best cool effect. Keep the space between the smoke machine and around things more than 20cm and between smoke machine and tinder more than 20cm. And without easily burnt things within 300cm (far away carpet, board & inflammable) .

Installation:

1. Take away the pack materials.
2. Set in the horizontal direction and open the cover of liquid can.
3. Add high quality haze liquid in and screw the cover of liquid can.

Low quality haze liquid will damage haze machine

Operation:

1. Connect the power line to the power socket with earth line. Turn the switch at 'On' and the machine heat.
2. The machine takes around 1 minute to warm up, then ready to use.
3. Can set the machine at a high place (with hanger) or on the ground. Do not spray fog to people directly and the clean angle should less than 15'.
4. Often check whether there is enough haze liquid in machine. The operation will make big damage to the machine if there is no haze liquid.
5. Operate the machine with menu instruction next.
6. The spray mouth can adjust the spray angle.

DMX Channel:

CH	Function	Value	Description
1	Fogging	0-9	No fog
		10-255	Fogging volume adjustment
2	Fan	0-255	Fan speed adjustment

Wireless remote control: 2 keys, unlock to fog, lock to stop

Digital display Operation

UP---Heating up, the machine need to warm up when 1st turn on, it will take around 1 minute to heat up.

Static circle lines---Ready to spray.

1) MENU---Short press it to set menu data below, ENTER to confirm.

Menu	Value	Function
A001	1-512	DMX address setting
P001	1-3	Fog output volume
F001	1-3	Fan speed
I001	1-900	Fog timing mode interval time setting
O001	1-900	Fog timing mode duration time setting

MENU button---Long press it more than 3 seconds to enter into backstage menu below, press ENTER to exit setting.

Menu	Function(pls set under supplier's instruction if necessary)
H(U)0XX	High temperature setting
L0XX	Low temperature setting
O0XX	Pump strength setting, the value bigger, the strength stronger.
CXXX	Pump liquid flow volume setting when pump at highest level, the value smaller, pump liquid more quicker.
EXXX	Pump liquid flow volume setting when pump at lowest level, the value smaller, pump liquid more quicker.
RXXX	Remote control ON/OFF

2) UP---Short press it to manual fogging at standby condition, press ENTER to exit, or change value when set menu data.

3) DOWN---Short press it to enter timing working mode at standby condition, press ENTER to exit, or change value when set menu data.

4) ENTER--Confirm or Exit