

find the menu, when the preset menu is displayed on the display, press the ENTER button to confirm, use the UP/DOWN button to select the submenu, press the ENTER button to save the setting or Automatically return to the previous menu. Press the MENU button to return, or wait for 30 seconds to automatically exit the menu mode.

10-Control menu map

Menu	Value	Function
Addr	001-512	Set the DMX start address.
Run	DMX Ctrl	DMX 512 Control mode
	Auto Run	Auto mode
	Sound Ctrl	Sound control mode
	Scene Mode	Auto / 1-10 program scene
	M/S Choose	Auto / Master / Slave
Disp	Language	English or Chinese
	Screen saver	Mode 1/ Mode 2 / On / Off
	Screen Rot	Reverse / Forward
Scene	Scene Select	1-10
	Scene Time	0-255
	01. Pan	0-255
	02. Tilt	0-255
	03. X Y spd	0-255
	04. Dimming	0-255
	05. Red	0-255
	06. Green	0-255
	07. Blue	0-255
	08. White	0-255

	09. Amber	0-255
	10. Purple	0-255
	11. Strobe	0-255
	12. Focus	0-255
	13. Mode	0-255
	14. Fade	0-255
	15. Pan fine	0-255
	16. Tilt fine	0-255
	17. Reset	0-255
	18. Color	0-255
Adva	Pan Invert	On / Off
	Tilt Invert	On / Off
	P/T Rectify	On / Off
	Pan Offset	001-255
	Tilt Offset	001-255
	Date hold	On / Off
	Reset	Reset system
	Factory Setting	Restore default settings
Info	Stepper onfo	Current motor operation value
	Error logging	Current error log feedback
	Fixture Status	Current Fixture Status
	Version	Current Version
	Light Time	Current lamp running time
	Total Time	Current total running time

DMX Channel Summary-12 Channels Mode

Channel	Value	Features
CH1	0-255	Pan movement by 540°
CH2	0-255	Tilt movement by 270°
CH3	0-255	Pan/Tilt speed , Pan/Tilt time
CH4	0-255	Dimming
CH5	0-255	Red Dimmer
CH6	0-255	Green Dimmer
CH7	0-255	Blue Dimmer

13

CH8	0-255	White Dimmer
CH9	0-255	Amber Dimmer
CH10	0-255	Violet Dimmer
CH11	0-5 6-10 11-255	Open Off Strobe
CH12	0-255	Zoom

DMX Channel Summary-18 Channels Mode

Channel	Value	Features
CH1	0-255	Pan movement by 540°
CH2	0-255	Tilt movement by 270°
CH3	0-255	Pan/Tilt speed , Pan/Tilt time
CH4	0-255	Dimming
CH5	0-255	Red Dimmer
CH6	0-255	Green Dimmer
CH7	0-255	Blue Dimmer
CH8	0-255	White Dimmer
CH9	0-255	Amber Dimmer
CH10	0-255	Violet Dimmer
CH11	0-5	Open
	6-10	Off
	11-255	Strobe
CH12	0-255	Zoom
CH13	000-049	No function
	050-99	Pan Auto mode
	100-149	Tilt Auto mode
	150-199	Pan & Tilt auto mode
	200-255	Sound control mode

CH14	000-005	No function
	6-127	Gradient color mode
	128-191	Pulse color mode
	192-255	Jump color mode
CH15	0-255	Pan fine
CH16	0-255	Tilt fine
CH17	0-249	No function
	250-255	Reset system
CH18	0-9	No function
	10-41	CTO
	42-255	Macro color